


## Cleanin instruction for Gloria LCL


- 1. Program key
- 2. Washing cycle button
- 3. Main switch
- 4. Autosteamer (optional)

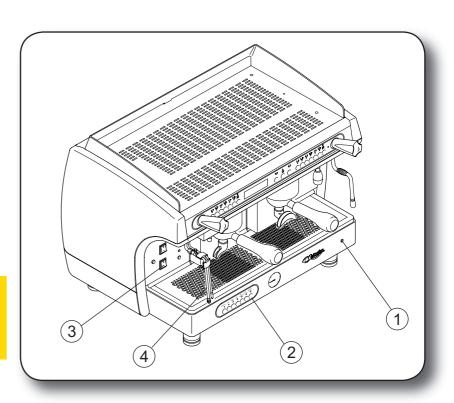

Before to do any cleaning operation, please read carefully the instruction.



## Wash cappuccino maker

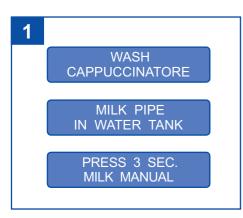

After a deternimated period, following the set up machine will shows theese segnalations.



Revove the silicon pipe from the milk conteiner and insert it in a water container (preferable with a special cleaning milk suluction diluited).



Controll the program key (1) is in OFF. To active the washing cycle press hold the button "Prog./ Manual milch" for 5 seconds.



Durability cycle 1 minute

## Desmonting and cleaning cappuccino maker



Taking the cappuccino maker with two hands, pull it down untill it willbe disconnected fro the own support.



Extract the cappuccino maker.



Disconnect the three colorated silicon pipe from the body of cappuccino maker.



Disconnect all peaces of cappuccino maker, starting from the steam injector.



Remove all peaces like shown in the picture.



Using the special brush clean all the holes of cappuccino maker. After rinse all components using hot water.

## **Wash Autosteamer**



Insert the se automatic steam arm in a water conteiner



Press the the autosteamer button (gold color) and wait the end of heating cycle.

Leave the steam pipe inserted in a conteiner of hot water for 5 minutes to revove the interna milk deposite.



Active the washing cycle evry time it be requested fro the machine, or in any case minimum twice a day.

Disassemble and clean the cappucino maker once a week.