

Korinto Prime ES Rev. 1.0 2UK

Filler Menu

1 - STATISTICS

1.1 - STATIS. PRINTING	1.1.1 - PARTIAL PRINTING	1.1.1.1 - SEL. CNT. PRINT. 1.1.1.2 - PRINT BAND CNT 1.1.1.3 - DISC. CNT.PRINT. 1.1.1.4 - FAIL. CNT.PRINT. 1.1.1.5 - COIN MECH. PRINT
1.2 - PRINT REL. STAT.	1.1.2 - TOTAL PRINTING 1.2.1 - PARTIAL PRINTING	1.2.1.1 - SEL. CNT. PRINT. 1.2.1.2 - PRINT BAND CNT 1.2.1.3 - DISC. CNT.PRINT. 1.2.1.4 - FAIL. CNT.PRINT. 1.2.1.5 - COIN MECH. PRINT
1.3 - STATIST. DISPLAY	1.2.2 - TOTAL PRINTING 1.3.1 - SEL. CNT. DISP.	1.3.1.1 - CNT DIS. X S SEL 1.3.1.2 - TOT CNT DISPLAY 1.3.1.3 - SEL.NO.CNT. DIS.
	1.3.2 - DISPLAY BAND CNT 1.3.3 - DISC. CNT. DISP. 1.3.4 - FAIL. CNT. DISP. 1.3.5 - COIN MECH. DISP.	1.3.5.1 - AUDIT DATA DISP. 1.3.5.2 - CASH COUNT. DIS.
1.4 - DISP. REL. STAT.	1.4.1 - SEL. CNT. DISP.	1.4.1.1 - CNT DIS. X S SEL 1.4.1.2 - TOT CNT DISPLAY 1.4.1.3 - SEL.NO.CNT. DIS.
	1.4.2 - DISPLAY BAND CNT 1.4.3 - DISC. CNT. DISP. 1.4.4 - FAIL. CNT. DISP. 1.4.5 - COIN MECH. DISP.	1.4.5.1 - AUDIT DATA DISP. 1.4.5.2 - CASH COUNT. DIS.
1.5 - DELETE REL. STAT.	1.5.1 - PARTIAL RESET	1.5.1.1 - SEL. CNT. RESET 1.5.1.2 - DISC. CNT. RESET 1.5.1.3 - FAIL. CNT. RESET 1.5.1.4 - COIN MECH. RESET
	1.5.2 - TOTAL RESET	

2 - SET INDIV. PRICE

2.1 - PRICE CASH
2.2 - PRICE LIST 1
2.3 - PRICE LIST 2
2.4 - PRICE LIST 3

3 - TUBE CONTROL

3.1 - FILLING TUBE
3.2 - TUBE EMPTYING

4 - BOILER TEMPERAT.

5 - TEST

5.1 - COMP DISPENSING
5.2 - WATER ONLY
5.3 - POWDER ONLY

6 - EVADTS

6.1 - CONNECTION

Korinto Prime ES Rev. 1.0 2UK

Technician Menu

1 - FAILURES

1.1 - FAILURE READING
1.2 - FAILURE RESET

2 - SET PARAMETERS

2.1 - CASH

2.1.1 - PRICES

2.1.1.1 - SET INDIV. PRICE

2.1.1.1.1 - PRICE CASH
2.1.1.1.2 - PRICE LIST 1
2.1.1.1.3 - PRICE LIST 2
2.1.1.1.4 - PRICE LIST 3

2.1.1.2 - SET GLOB. PRICES

2.1.1.2.1 - PRICE CASH
2.1.1.2.2 - PRICE LIST 1
2.1.1.2.3 - PRICE LIST 2
2.1.1.2.4 - PRICE LIST 3

2.1.1.3 - TIME SCHEDULE

2.1.1.3.1 - SET DATE & TIME
2.1.1.3.2 - TIME BAND 1
2.1.1.3.3 - TIME BAND 2
2.1.1.3.4 - TIME BAND 3
2.1.1.3.5 - TIME BAND 4

2.1.2 - COIN MECHANISM

2.1.1.4 - USER GROUPS

2.1.2.1 - COIN MECH. SET.
2.1.2.2 - IMMEDIATE CHANGE

2.1.3 - DECIMAL POINT

2.2 - SELECTIONS

2.2.1 - SET WATER

2.2.1.1 - WATER DOSES
2.2.1.2 - SET WHIP DOSES

2.2.1.2.1 - SET WHIP DOSES
2.2.1.2.2 - SET MODALITY

2.2.2 - SET POWDER

2.2.1.3 - EL VALVE SETTING
2.2.1.4 - DATA PREINFUS.

2.2.2.1 - POWDER DOSES
2.2.2.2 - DOSER SETTING

2.2.3 - SELECTION STATUS
2.2.4 - SEL <-> BUTTON
2.2.5 - CHECK NO. SELEC.

2.3 - MACHINE PARAM.

2.3.1 - BOILER TEMPERAT.
2.3.2 - TANK
2.3.3 - ENAB.FLUSHBUTTON
2.3.4 - TUBES OK...?
2.3.5 - BUZZER ENABLE
2.3.6 - MAINT.DISP.SETT
2.3.7 - ENAB.AUTOM.FLUSH
2.3.8 - ENERGY SAVING

2.3.8.1 - SET ENERGY SAV.
2.3.8.2 - ENERGY SAV. PAR.

2.3.9 - DEC. CYCLE
2.3.a - EQ. CABINET
2.3.b - MAX. NUM COUNT.
2.3.c - EMPTY COFF. ABIL
2.3.d - ATT. CONTAC. H2O
2.3.e - LED LIGHT

2.4 - DISPLAY

2.4.1 - LANGUAGE
2.4.2 - PROMO. ADVERT.

2.4.2.1 - ENABLE PR. ADV.
2.4.2.2 - SET PROMO. ADV.

2.4.3 - PROMOTIONAL IMG.
2.4.4 - CONTRAST CONTROL

2.5 - PRE-SELECTIONS

2.5.1 - WATER +

2.5.1.1 - SELECTION ENABL.
2.5.1.2 - DOSE VARIATION
2.5.1.3 - PRICE VARIATION

2.5.2 - WATER -

2.5.2.1 - SELECTION ENABL.
2.5.2.2 - DOSE VARIATION
2.5.2.3 - PRICE VARIATION

2.5.3 - STRONG

2.5.3.1 - SELECTION ENABL.
2.5.3.2 - DOSE VARIATION
2.5.3.3 - PRICE VARIATION

2.5.4 - MILD

2.5.4.1 - SELECTION ENABL.
2.5.4.2 - DOSE VARIATION
2.5.4.3 - PRICE VARIATION

2.5.5 - POWDER COFFEE

2.5.5.1 - SELECTION ENABL.
2.5.5.2 - DOSE VARIATION
2.5.5.3 - PRICE VARIATION

2.5.6 - EXTRA MILK

2.5.6.1 - SELECTION ENABL.
2.5.6.2 - DOSE VARIATION
2.5.6.3 - PRICE VARIATION

2.5.7 - MOCHA

2.5.7.1 - SELECTION ENABL.
2.5.7.2 - DOSE VARIATION
2.5.7.3 - PRICE VARIATION

2.6 - MISCELLANEOUS

2.6.1 - FB DATA
2.6.2 - JUG FACILITIES
2.6.3 - PASSWORD

2.6.3.1 - SET PASSWORD
2.6.3.2 - ENABLE PASSWORD
2.6.3.3 - PWD CNT ZEROING.
2.6.3.4 - PWD JUG FACILITY
2.6.3.5 - PWD FREE VENDING
2.6.3.6 - PWD BUTTON LOCK
2.6.3.7 - PWD LAVAGGI
2.6.3.8 - PWD TEST VEND
2.6.3.9 - RESET FILTER CNT
2.6.3.a - PWD SIDE SUPPLY
2.6.3.b - PWD SETUP RECOV.

2.6.4 - ENABLE FILL MENU
2.6.5 - AB.STOP.ER.TASTO
2.6.6 - PRG. FAN TIMER

Korinto Prime ES Rev. 1.0 2UK

Technician Menu

3 - STATISTICS

3.1 - ELECTR. COUNTER	3.1.1 - DISPLAY COUNTERS	
	3.1.2 - RESET COUNTER	
3.2 - STATIST. DISPLAY	3.2.1 - SEL. CNT. DISP.	3.2.1.1 - CNT DIS. X S SEL 3.2.1.2 - TOT CNT DISPLAY 3.2.1.3 - SEL.NO.CNT. DIS.
	3.2.2 - DISPLAY BAND CNT	
	3.2.3 - DISC. CNT. DISP.	
	3.2.4 - FAIL. CNT. DISP.	
	3.2.5 - COIN MECH. DISP.	3.2.5.1 - AUDIT DATA DISP 3.2.5.2 - CASH COUNT. DIS.
3.3 - STATISTICS RESET	3.3.1 - PARTIAL RESET	3.3.1.1 - SEL. CNT. RESET 3.3.1.2 - DISC. CNT. RESET 3.3.1.3 - FAIL. CNT. RESET 3.3.1.4 - COIN MECH. RESET
	3.3.2 - TOTAL RESET	
3.4 - DISP. REL. STAT.	3.4.1 - SEL. CNT. DISP.	3.4.1.1 - CNT DIS. X S SEL 3.4.1.2 - TOT CNT DISPLAY 3.4.1.3 - SEL.NO.CNT. DIS.
	3.4.2 - DISPLAY BAND CNT	
	3.4.3 - DISC. CNT. DISP.	
	3.4.4 - FAIL. CNT. DISP.	
	3.4.5 - COIN MECH. DISP.	3.4.5.1 - AUDIT DATA DISP 3.4.5.2 - CASH COUNT. DIS.
3.5 - DELETE REL. STAT.	3.5.1 - PARTIAL RESET	3.5.1.1 - SEL. CNT. RESET 3.5.1.2 - DISC. CNT. RESET 3.5.1.3 - FAIL. CNT. RESET 3.5.1.4 - COIN MECH. RESET
	3.5.2 - TOTAL RESET	
3.6 - EN. CNT AT START		
3.7 - STATIS. PRINTING	3.7.1 - PARTIAL PRINTING	3.7.1.1 - SEL. CNT. PRINT. 3.7.1.2 - PRINT BAND CNT 3.7.1.3 - DISC. CNT. PRINT. 3.7.1.4 - FAIL. CNT. PRINT. 3.7.1.5 - COIN MECH. PRINT
	3.7.2 - TOTAL PRINTING	
3.8 - PRINT REL. STAT.	3.8.1 - PARTIAL PRINTING	3.8.1.1 - SEL. CNT. PRINT. 3.8.1.2 - PRINT BAND CNT 3.8.1.3 - DISC. CNT. PRINT. 3.8.1.4 - FAIL. CNT. PRINT. 3.8.1.5 - COIN MECH. PRINT
	3.8.2 - TOTAL PRINTING	
3.9 - MILK CLEAN COUNT	3.9.1 - NUMBER OF CLEANS	
	3.9.2 - MILK RESET COUNT	
	3.9.3 - DATE RESET	
	3.9.4 - DATE FIRST CLEAN	
	3.9.5 - DATE LAST CLEAN	

4 - TEST

4.1 - TEST DISPENSING	4.1.1 - COMP DISPENSING
	4.1.2 - WATER ONLY
	4.1.3 - POWDER ONLY
4.2 - SPECIAL FUNCT.	4.2.1 - ESPR. UNIT ROTAT.
	4.2.2 - RELEASE DOSE
	4.2.3 - EMPTY ES. BOILER
	4.2.4 - MANUAL INSTALL
	4.2.5 - FRESH BREW UNIT

5 - MISCELLANEOUS

4.3 - AUTOTEST	
5.1 - D.A. REGISTRY	5.1.1 - INSTALL. DATE
	5.1.2 - PROG. M/C CODE
	5.1.3 - OPER. CODE ENTRY
5.2 - INITIALISING DB	
5.3 - EVADTS	5.3.1 - PASS CODE
	5.3.2 - SECURITY CODE
	5.3.3 - CONNECTION
	5.3.4 - PROTOC. EVADTS
	5.3.5 - MODE
	5.3.6 - TIPO
	5.3.7 - SERIAL BAUDRATE
	5.3.8 - UNDEFINED LENGTH
5.4 - UPKEY	5.4.1 - SETUP MANAGEMENT
	5.4.1.1 - UPKEY -> MACHINE
	5.4.1.2 - MACHINE -> UPKEY
	5.4.1.3 - DELETE
	5.4.1.4 - DELETE ALL
	5.4.1.5 - SALVA SETUP
	5.4.2 - AUDIT MANAGEMENT
	5.4.2.1 - MACHINE -> UPKEY
	5.4.2.2 - DELETE
	5.4.2.3 - DELETE ALL

6 - USB

6.1 - SETUP MANAGEMENT	6.1.1 - USB->V.MACHINE
	6.1.2 - V.MACHINE->USB
	6.1.3 - DELETE
	6.1.4 - DELETE ALL
6.2 - AUDIT MANAGEMENT	6.2.1 - V.MACHINE->USB
	6.2.2 - DELETE
	6.2.3 - DELETE ALL

Korinto Prime ES Rev. 1.0 2UK
Technician Menu

[illegible]