

Sprso Giro



Placement and connections

This leaflet provides information about space- and connection requirements to ensure safe and successful installation, and operation of your coffee machine.

Please consult your local JDE Professional helpdesk for more information and explanation.

Please see the product brochure for more detailed information regarding range of available drinks, specifications, options and accessories.



Placement and connections

THE BASIS FOR GREAT COFFEE

Sprso Giro




Placement and connections

Please observe the guidelines to maximize safety and performance

units of measurement = mm

Please consult your local JDE Professional helpdesk for more information and explanation.

Please see the product brochure for more detailed information regarding range of available drinks, specifications, options and accessories.

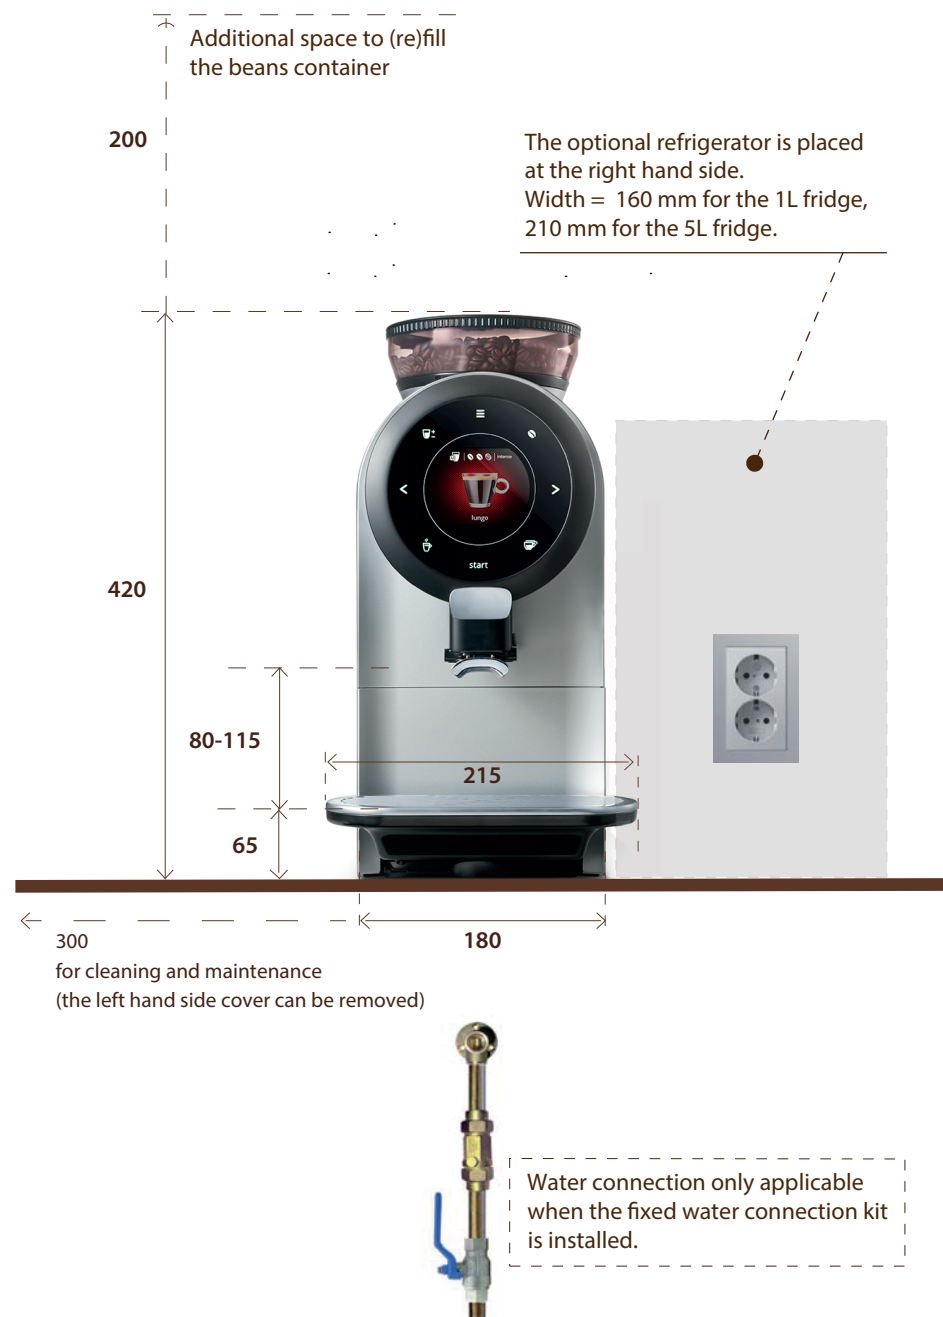

⚡ POWER SUPPLY

Power consumption (rated): 1978 W (excl. 18W for the 1L fridge / 29W for the 5L fridge)
230VAC/50Hz, 16A Wall outlet with earth connection (in compliance with your local regulations),
Distance from machine : <1 mtr.

💧 WATER CONNECTION

(in compliance with your local regulations)

Water connection only applicable when the fixed water connection kit is installed.

Copper piping (or similar material - approved for drinking water supply)

Non-return valve (mandatory in many countries – check your local regulations)

Water tap : 3/4" or 3/8"

Distance from machine : <1 m

Water hose length : 1000 mm

Dynamic pressure : min. 1 bar at 10 L/min

Static pressure : max. 8 bar non-shock

📏 DIMENSIONS

H 420 mm x W 215 mm x D 440 mm

Add 300 mm at the left hand side for cleaning and maintenance.

Add 100 mm space at the rear side to remove the water tank

Add 200 mm above the machine to fill the coffee beans container

Empty weight : ca. 10,6kg / operational weight : ca. 13,1kg

🔌 OTHER

The wall socket and water stop valve should be located in the same room as the equipment and easily accessible.

Do not use power extension cords.

The equipment is only suitable for indoor use. (temperature: 1 ~ 32 °C, humidity: <80% RH)

Place the equipment on a stable surface or furniture, capable of supporting its total weight.

Sprso Giro




Placement and connections

Please observe the guidelines to maximize safety and performance

units of measurement = mm

Please consult your local JDE Professional helpdesk for more information and explanation.
Please see the product brochure for more detailed information regarding range of available drinks, specifications, options and accessories.

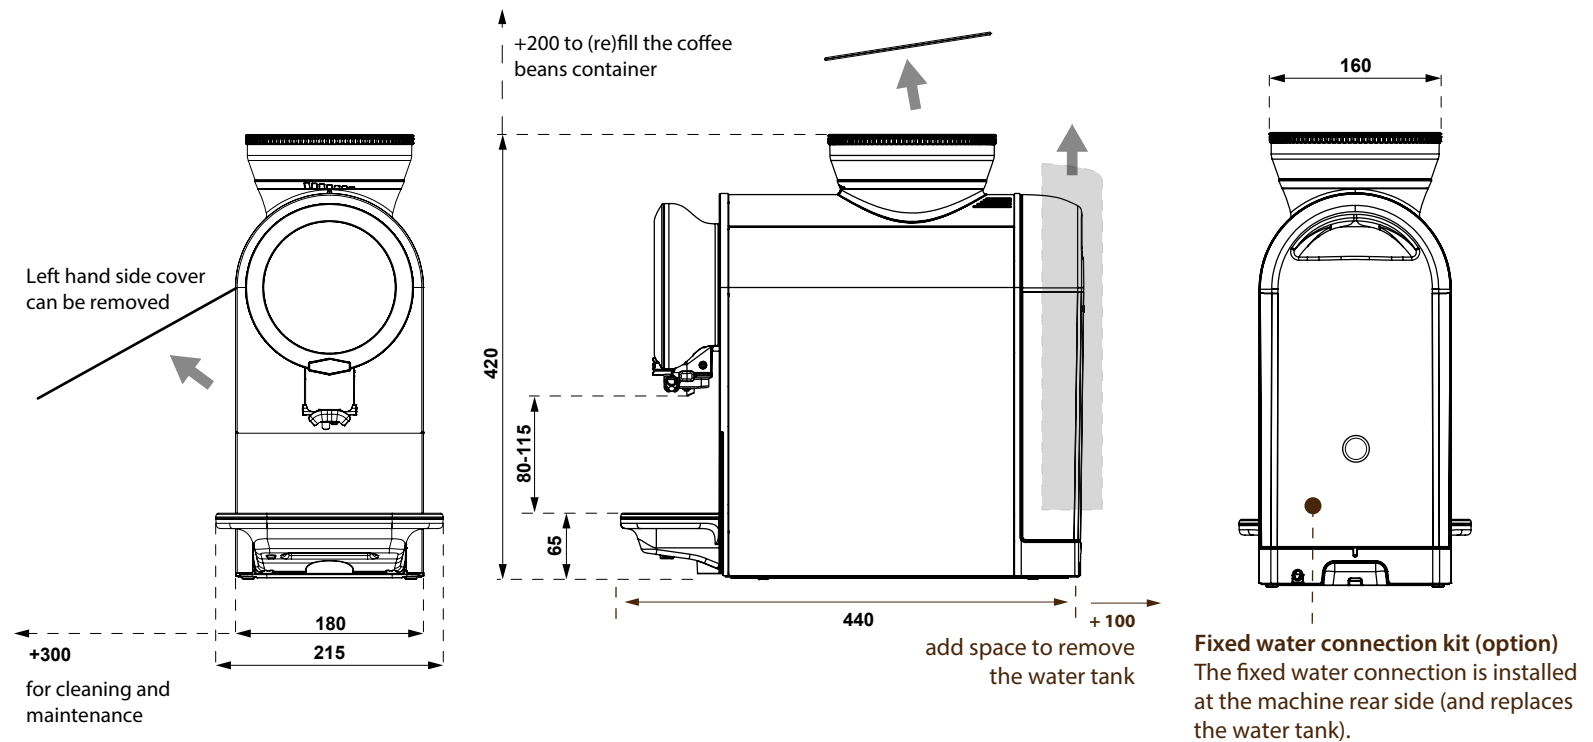

Refrigerator placement (option)

The refrigerator is placed at the right hand side. Usage of the 5L refrigerator requires a pedestal as shown below to ensure an optimal position of the milk supply tube. The pedestal is optional for the 1L refrigerator.

