



Sprso Giro Troubleshooting

Cleaning the coffee brewer

The coffee brewer can be fully disassembled, but this is not required when executing the cleaning procedure. This simplifies the overall procedure.

Brewer part names (these are mentioned in the text)



1. Release knob (yellow)
2. Upper piston
3. Brewer chamber (with lower piston inside)
4. Connection clip (geel)
5. Coffee tube

Cleaning procedure



Unlock the brewer: Press the yellow release knob upwards.



Take the brewer out of the machine; Take out the right part first (upper piston).




Slide the brewer chamber from the axle, and take it out.



Clean the brewer under a running tap. Dry afterwards with a paper towel.



The yellow clip may be loosened unintentionally. The clip can be remounted as follows;

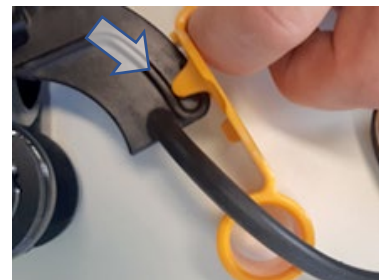

Guide the clip along the edge (on the brewing chamber) as shown here.

NB. The brewer (parts) cannot be cleaned in a dishwasher.



Sprso Giro Troubleshooting



Hinge the clip back, therewith aligning the opening of the clip with that of the brewing chamber.



Mount the brewer back in the machine: Slide the brewing chamber back onto the axle.



Slide the right part back in, and press slightly until you notice a clicking sound – the brewer is now locked in place.



Remount the side panel.

The machine will prompt periodically for cleaning with a tablet (a cleaning tablet is then inserted in the brewing chamber). Follow the steps shown in the display.